CODE V Installation Guide

for CODE V Legacy Licensing
and Synopsys Common Licensing

Version 2024.03

March 2024

Contents

Chapter 1 Getting Started 5

CODE V System Requirements 5

Licensing Requirements 6

Where You Get Your Installation Files 9

Contacting Customer Support 9

Chapter 2 Installing CODE V with Legacy Licensing 11

About Fixed and Floating License 11

What You Need for Fixed License Installation 11

Installing CODE V 12

Obtaining the Host ID for a License Dongle 14

Installing a License Key File for a Fixed License 15

Modifying Legacy License

Chapter 5 Installing and Managing an SCL Network License 45
Selecting a License Server 46
Installing Synopsys Common Licensing on a License Server 46
Obtaining the Host ID for an SCL Network License 47
Installing a License Key for an SCL License Server 48
Installing CODE V on Client Machines 49
Modifying License Options for Synopsys Common Licensing 50
Managing Network Licenses 50
Appendix A Using SolvNetPlus to Obtain CODE V Software and Licenses 51
Signing Up for a SolvNetPlus Account 52
Downloading CODE V Software from SolvNetPlus 53
Ordering Media (CDs/DVDs) 56
Installing CODE V 57
Obtaining the Host ID 58
Retrieving License Keys 58

Chapter 1 Getting Started

This chapter applies to all users. It contains links to CODE V system requirements, describes the

Note that hardware and system requirements for computers that will run CODE V are also online:

https://www.synopsys.com/optical-solutions/codev/hw-systems.html

PDF Viewer

The documents in the CODE V Documentation Library are provided as Portable Document Format (PDF) files. You are able to view PDF files in any PDF viewer but they may not support PDF features such as links that you can click to jump to another document. To use full PDF features, you must have Acrobat Reader version 8.x or higher installed on your computer and set as your default PDF viewer. Note that for many systems, the default PDF viewer is a browser (e.g., Edge, Chrome).

Licensing Requirements

Synopsys Common Licensing Requirements

With Synopsys Common Licensing (SCL), you can run CODE V using either a *nodelocked* license or a *network* license.

Where You Get Your Installation Files

Where you get your files depends on how you purchased CODE V:

- Customers who work directly with Synopsys Optical Solutions will retrieve their software and license keys from the Synopsys SolvNetPlus website. For details about obtaining CODE V software and license key files, see Appendix A, “Using SolvNetPlus to Obtain CODE V Software and Licenses” on page 51.
- Customers who work with a CODE V software distributor will obtain their software and license keys from their local distributor. See the Synopsys Optical Solutions Group Global Contacts page

Chapter 2 Installing CODE V with Legacy Licensing

This chapter describes how to install CODE V with a fixed license, which allows you to run CODE V only on the computer on which it is installed. Note that all instructions are for the Microsoft Windows operating system.

About Fixed and Floating License

You can run CODE V using either a *fixed* license or a *floating* license. A fixed license allows you to run CODE V only on the computer on which it is installed. A floating license, which is installed on a network server, allows you to run CODE V on any client computer installed on the same network (see *Installing CODE V with a Floating License (Legacy Licensing)* on page 17). The number of users that can use CODE V concurrently is limited to a predetermined number by the license management software.

What You Need for Fixed License Installation

Fixed licenses are standalone software copies to be used on one computer only. You will need the following to run CODE V on a fixed-license system:

- **USB Dongle** – the dongle comes with a label that shows its Host ID.
- **License Key File** – a license key file that corresponds to your CODE V license and to the Host ID of the USB dongle you are using.
- **CODE V** – You need a copy of CODE V installation files.

For details, see Appendix A, “Using SolvNetPlus to Obtain CODE V Software and Licenses” on page 51.

Note: For customers working with distributors, please contact your local CODE V software distributor to obtain your software and license. See the Synopsys Optical Solutions Group Global Contacts

---

Installing CODE V

These instructions assume that you have already have the USB dongle, a license key file and the CODE V installation files. Your working folder is the location where your user-created files are stored. By default, your working folder is set by default to C:\CVUSER. You can change this location during installation or in CODE V after installation.

1. Log on to your computer as Administrator.
2. Navigate to the folder that contains the CODE V installation package.
3. Double-click the file **CODEV*version*.exe**.

   where *version* is the version number for the release.

   – If a User Account Control dialog box is displayed with the message *Do you want to allow this app to make changes to your PC?*, click **Yes** to continue.

   The installation files are extracted, and then the Welcome to the InstallShield Wizard page is displayed.

12. When the installation is complete, click **Finish** to close the wizard.

If you already have a license key for this product, skip to “Installing a License Key File for a Fixed License” on page 15. If you do not yet have a license key, continue with “Obtaining the Host ID for a License Dongle” on page 14.

Obtaining the Host ID for a License Dongle

A license key is designed to work for only one USB dongle, so the license key is associated with a unique value encoded on the dongle called a *Host ID*. Before you can request a license key you must know the Host ID for the license dongle. The Host ID is printed on a label on the USB dongle. You can also obtain the Host ID by running GetHostID, which reads it from the dongle. If you need to provide your Host ID to CODE V Support or Sales, the recommended method is to use GetHostID to generate a file that you can send. Follow these steps to run the GetHostID utility.

1. Insert the USB dongle in an active USB port. The beacon on the dongle should be illuminated. If not, try connecting it to a different USB port.
2. Click the Windows Start button and select **CODE V 2024.03** > **GetHostID**.

   In the following figure, the GetHostID utility displays two lines under the Read Dongle Host ID button, which indicates that two USB dongles are active on this computer.

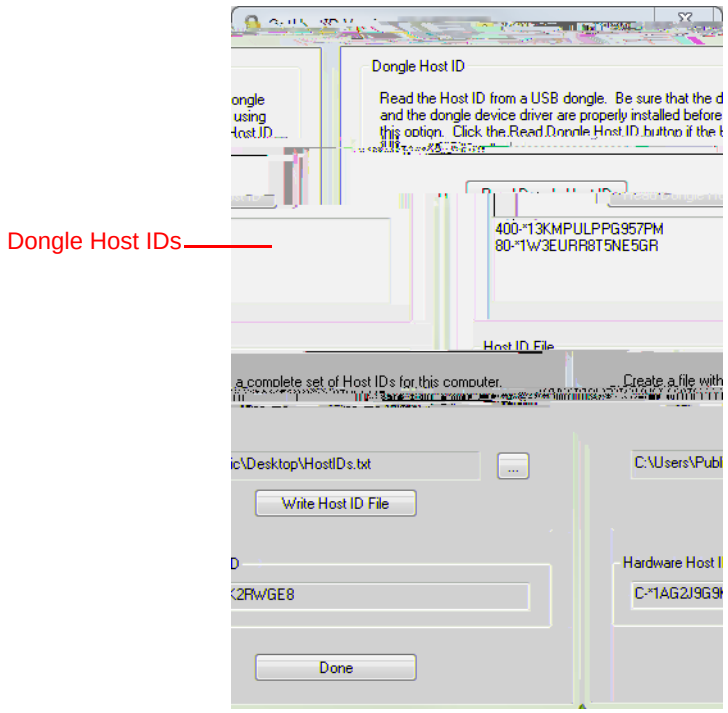

   If the box is empty, click the **Read Dongle Host ID** button. If the box remains empty, check the dongle to see whether the LED on it is lit. Light indicates that the dongle has been plugged-in properly. If the LED is not lit, check the connection or try inserting the dongle into a different USB port.

3. To create a HostIDs text file (.TXT) that you can send to CODE V Support or Sales, in the GetHostID dialog box click **Write Host ID File** and then click **OK**. (If you cannot send the Host IDs file, open the file, copy the contents of the file and paste it into an email message that you send to Customer Support or Sales.)
4. To copy the Host ID, select the Host ID, right-click and then click **Copy**. You can then paste the Host ID into your desired destination.
5. Click **Done** to close the GetHostID utility.

Modifying Legacy License Options

If you need to change the Legacy license type for your CODE V installation (fixed or floating) or change the host name of the license server to use with a floating license, use the following procedure.

1. Search for and open **Add or Remove Programs**.
2. In Programs and Features**, c**lick the CODE V version you want to modify and then click **Uninstall**.
3. When Windows asks if you want to uninstall, click **Uninstall**.
4. In the InstallShield Wizard *Welcome* page, the **Modify Licensing** option is preselected.

5. Click **Next**.
6. In the **License Installation Options**

Chapter 3 Installing CODE V with a Floating License (Legacy Licensing)

This chapter describes how to install CODE V so that a set of CODE V floating licenses (for Legacy Licensing) can be shared by a group of computers on the same network. The number of users that can use CODE V concurrently is limited to a predetermined number by the licensing software. A single user can open up to eight concurrent CODE V sessions per floating license per computer. If a user opens more than eight concurrent CODE V sessions on the same computer, an additional floating license will be used (if available). Note that all instructions are for the Microsoft Windows operating system.

The floating license capability requires Synopsys Optical Solutions Floating License Manager, which is a Sentinel RMS license manager that has been customized for Synopsys Optical Solutions software. If you install other Synopsys Optical Solutions software products, they will share the same license management software, and their licenses will be written to the same license key file. The applications cannot share licenses; they will share only the license server software.

Note: Installing a floating license requires system-administration level training, and should be performed by someone who is familiar with your network structure. Also, note that you must be logged in as administrator on the license server.

The steps for installing CODE V to run with a floating license are:

1. *Selecting a License Server* on page 18
2. *Installing the Floating License Manager on the License Server* on page 19
3. *Obtaining the Host ID for a License Dongle on the License Server* on page 26
4. *Installing the License Key for a Floating License* on page 27
5. *Installing CODE V on Client Machines* on page 28
6. *Optional: Managing Floating Licenses* on page 30
7. *Optional: Logging Floating License Usage* on page 35

What You Need for Floating License Installation

Floating licenses are run on a license server, and operate as a service to client computers attached to the network. The license server and client computers must be able to communicate with each other using the UDP protocol. You will need the following items to run CODE V:

License Server

- **USB Dongle** – the dongle comes with a label that show its Host ID.
- **License Key File** – a license key file that corresponds to your CODE V license and to the Host ID of the USB dongle you are using.
- **Floating License Manager software** provided by Synopsys Optical Solutions. This guide provides instructions for installing the Synopsys Optical Solutions Floating License Manager (a Sentinel RMS license manager that has been customized for Synopsys Optical Solutions software). See also “CODE V System Requirements” on page 5.

CODE V Client

- **CODE V** – You need a copy of CODE V installation files. Note that the license key file is needed only on the license server; no license key file is needed on client computers.
- **Server Host Name** – the name of the server that is hosting the floating license manager. You must enter this information during installation.

Selecting a License Server

Before installing any software, you must identify the computer that will act as the floating license server. This must be a computer connected to a network that can grant access to one or more client machines.

Note: The Synopsys OSG Floating License Manager communicates with its clients over port 5093 using the UDP protocol. If you will be managing licenses for client computers across different subnets, you must

6. Click **Next**.

   The License Agreement screen for the OSG Floating License Manager Admin Tools is displayed.

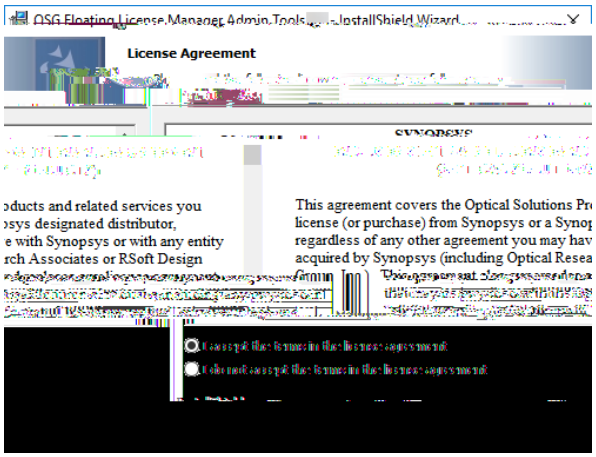

7. Click the **I Accept** option and click **Next** to continue.

   The Ready to Install screen is displayed.

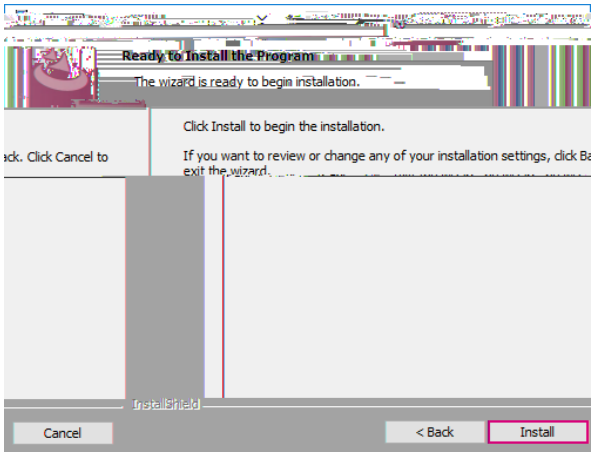

8. Click **Install**.

   The progress screen is displayed while the software is installed.

9. Accept the default settings for all options.

   The Welcome screen for the Sentinel RMS License Manager is displayed.

10. Click **Next**.

    The License Agreement screen for the Sentinel RMS License Manager wizard is displayed.

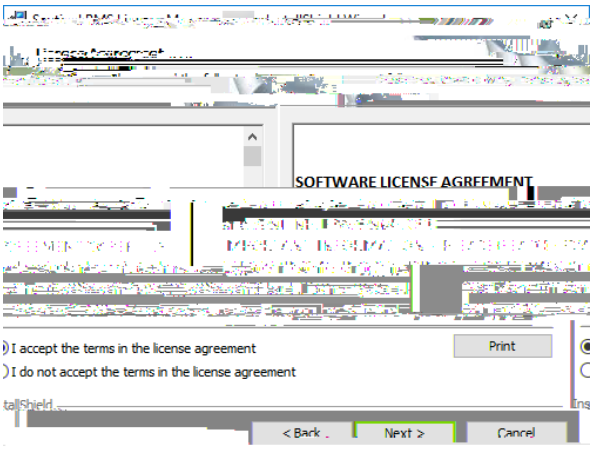

11. Click the **I Accept** option and then click **Next** to continue.

    The Customer Information dialog box is displayed.

12. Click **Next** to accept the defaults and continue.

The Destination Folder screen is displayed.

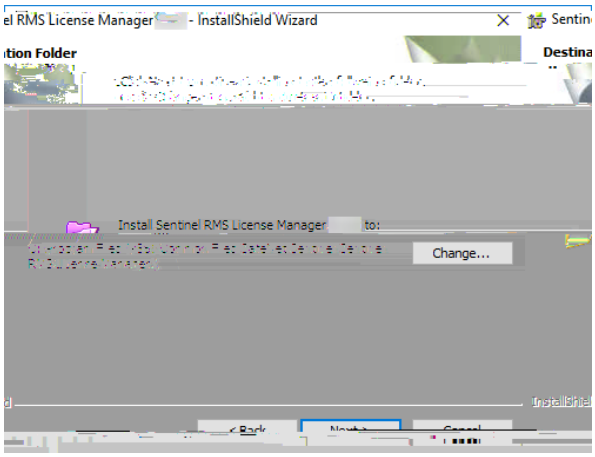

13. Click **Next** to accept the default and continue.

    The Setup Type screen is displayed.

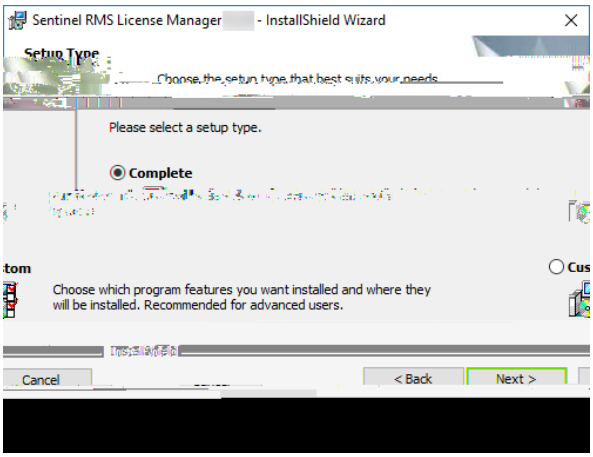

14. Click **Next** to accept **Complete** (recommended) and continue.

When the installation is the Completed for the Sentin el License Manager is displayed.

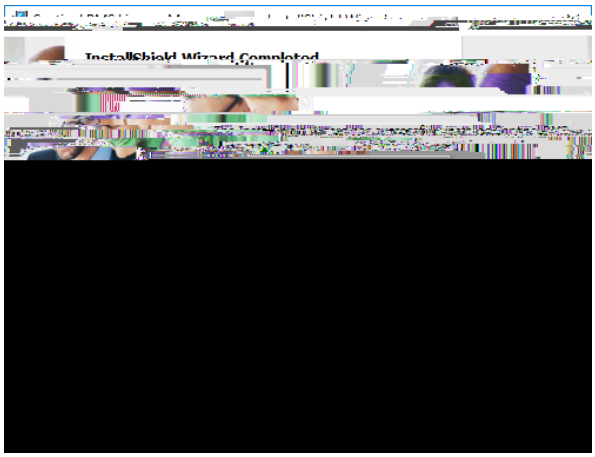

17. Click **Finish**.

    The Completed screen for the OSG Floating License Manager Admin Tools issplayed.

18. Click **Finish**.

    The installation ismplete.

19. Reboot your computer if prompted to do so.

    If you already have a CODE V license key file, skip to *Installing the License Key for a Floating License* on page 27. If you do not yet have a license key file, continue with *ObtaKiVng the Host ID for a License Dongle on the License Server* on page 26.

Obtaining the Host ID for a License Dongle on the License Server

A license key is designed to work for only one USB dongle, so the license key is associated with a unique value encoded on the dongle called a *Host ID*. Before you can request a license key you must know the Host ID for the license dongle. The Host ID is printed on a label on the USB dongle. You can also obtain the Host ID by running GetHostID, which reads it from the dongle. If you need to provide your Host ID to CODE V Support or Sales, the recommended method is to use GetHostID to generate a file that you can send.

1. Insert the USB dongle in a USB port on the license server. The beacon on the dongle should be illuminated. If not, try connecting it to a different USB port.
2. Click the Windows Start button and then select **OSG Floating License Manager** > **GetHostID**.

3. To create a HostIDs text file that you can send to CODE V Support or Sales, click **Write Host ID File** and then click **OK**. (If you cannot send the Host IDs file, open the file, copy the contents of the file and paste it into an email message that you send to CODE V Support or Sales.)
4. To copy the Dongle Host ID, select the Host ID, right-click and then click **Copy**. You can then paste the Host ID into your desired destination.
5. Click **Done** to close the GetHostID utility.
6. Continue with “Retrieving License Keys” on page 58 for instructions on retrieving your license key file from the Synopsys SolvNetPlus website. After you have your license key, go to “Installing the License Key for a Floating License” on page 27.

Installing the License Key for a Floating License

After you install the license server software and retrieve a license key, you need to install the license key on the license server before client machines can succe

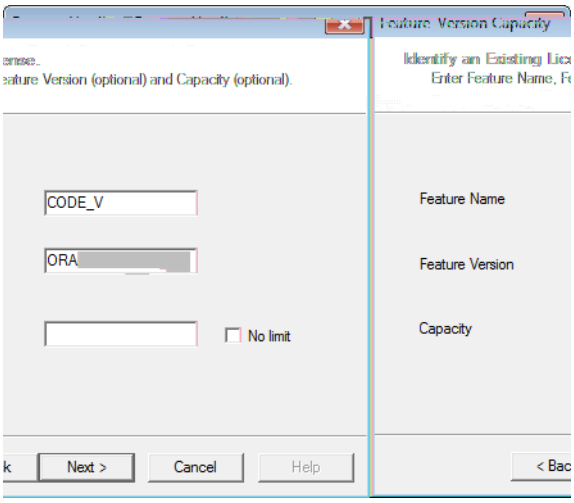

6. For Feature Version, enter **ORA** (upper case).
7. Click **Next** to open the *Group* window.
8. Follow these steps to establish a user group:
    a. Enter a name of your choosing that identifies the user group for whom you want to allow or deny access. The name cannot exceed 64 characters.

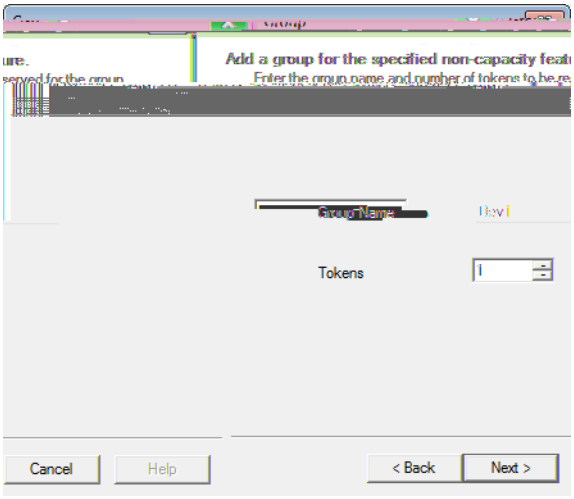

    b. In the *Tokens* field, enter the number of licenses to reserve for that group.
    c. Click **Next** to open the *Members* window.

g. Click **Finish** on the **Members** window, to apply the changes and close the window.

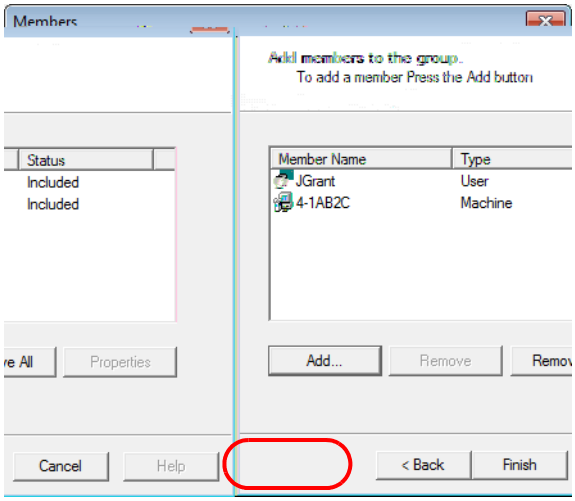

10. In the Wisgrmgr window, to add an additional:
    a. group and its members, select **Group** > **Add** and repeat steps 7, 8 and 9.
    b. member to an existing group, double click the group name, click the Members tab and repeat step 9.
11. When you are finished, select **File > Save As** and navigate to the directory where the license manager is installed.

    By default, license manager is installed in:

    C:\Program Files (x86)\Common Files\SafeNetSentinel\Sentinel RMS License Manager\WinNT
12. Keep the default file name, *lsreserv*, and then click Save. The License Manager references this file to determine which users have access to each feature.
13. Close the Wisgrmgr window and then close the WimAdmin window.
14. Restart the Sentinel RMS License Manager, as follows.
    a. Search for **Control** and then select **System Security**
    a. Select **Administrative Tools** and then **Services**.
    b. Locate and right-click the **Sentinel RMS License Manager** in the list of services and select the **Restart** option from the pop-up menu.

Logging Floating License Usage

Floating license usage is automatically recorded in the file usage.log. The following example shows how information is formated in this file.

As shown in the highlighted portions, the entries include:

1 - day, date, and time stamp

2 - the product or module

3 - a code that indicates whether the license was issued (0), denied (1), or released (2)

4 - the number of floating licenses in use after the current release or request.

5 - elapsed time the license was in use (in seconds). This value is 0 until the license is released.

6 - the user ID

7 - the host name

8 - the version number for the floating license manager

By default, the usage.log file is located in the folder C:\Windows\SYSWOW64. You can change the location

2. In the Environmental Variables dialog box, select **LSERVOPTS** and click **Edit**.

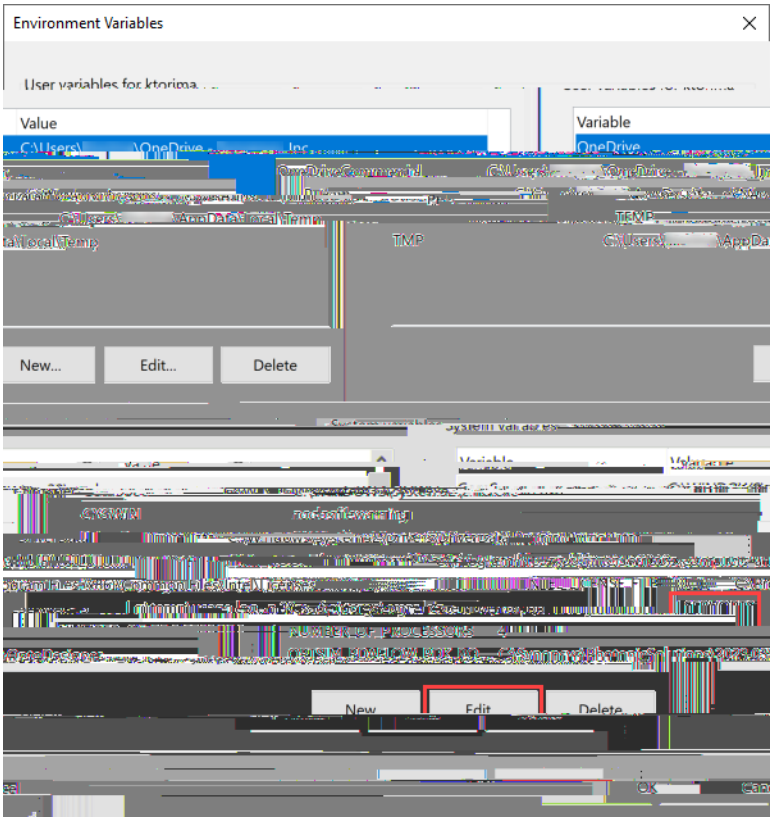

By default, the value for LSERVOPTS is

```
-l usage.log -z 20m -f error.log
```

3. In the Edit System Variable dialog box, change the path and/or file name by replacing the string **`usage.log`** with the desired path and file name. In the following example, the new path for the file is **`C:\temp\usage.log`**.

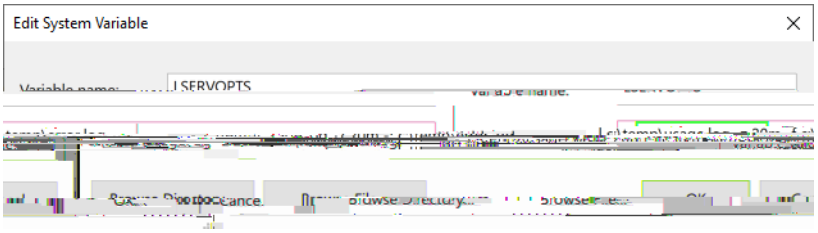

4. Restart the license manager in the services list, as described in the following steps.

   The change takes effect after the license manager is restarted.

   a. In the Windows search box, type “services” and select the *Services* app.

   b. In the Services dialog box, locate and select the **Sentinel RMS License Manager** and then click **Restart the Service**.

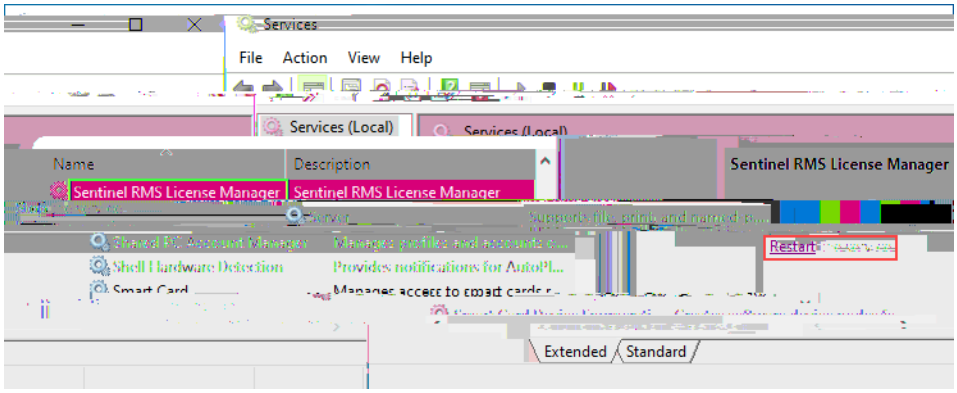

   For additional information about the usage log, See the *Sentinel System Administrator’s Guide*. After the license manager software is installed, this manual is available by selecting the Windows **Start** menu and selecting **Programs** > **OSG Floating License Manager** > **System Administrator’s Guide**.

Chapter 4 Installing CODE V with an SCL Nodelocked License

With Synopsys Common Licensing, you can run CODE V using either a nodelocked license or a network license. This chapter describes how to install the product to run using a nodelocked license, which allows

Installing CODE V with a Nodelocked License

These instructions assume that you have already have the items described in What You Need for Nodelocked License Installation on page 39. If your site uses a dongle, it should be plugged into your machine.

1. Log on to your computer as Administrator.
2. Navigate to the folder that contains the CODE V installation package.
3. Double-click the file CODEVversion.exe.

   where version is the version number for the release.

   – If a User Account Control dialog box is displayed with the message Do you want to allow this app to make changes to your PC? click Yes to continue.

   The installation files are extracted, and then the Welcome to the InstallShield Wizard page is displayed.
4. Click Next to continue to the License Agreement page.
5. If you accept the agreement, click Yes to continue to the Choose Destination Location page.
6. To accept the default location for the program, click Next.

   The Choose Working Folder page is displayed. The working folder is used to store your user files.
7. To accept the default location for the working folder, click Next.

   – If you previously installed CODE V you will be prompted to confirm whether to use the existing directory. Click Yes to accept and continue to the License Installation Options page.

   – If this is a new installation, you will continue to the License Installation Options page.
8. Click the check box next to My license is for Synopsys Common Licensing and click Next.
9. Select

4. Copy the Host ID to retrieve your license

Modifying License Options for Synopsys Common Licensing Nodelocked Licenses

Use the Configure Licensing tool to update your SCL license information. You can use it to switch between SCL license types. For Nodelocked and Network Server license types, you can change the license key files. For the Network Client license type, you can update the information to communicate with Network Servers. Follow these steps to change the SCL license information.

1. Click the Windows Start button and select **CODE V 2024.03 > Configure Licensing (CV2024.03)**.

   The License Type Setup screen is displayed.

2. Select the option you want and click **Next**.
3. Based on your selection, do one of the following:
   - For *Nodelocked* or *Network (Server Installation)*, enter or browse to the license key file and click **Next**. On the SCL Installer Setup screen, leave the input field blank an click **Next** to accept the current version.
   - For *Network (Client Installation)*, enter the name of the server on the Network Client Setup screen and click **Next**.

The licensing option is updated, and the setup wizard is closed.

Chapter 5 Installing and Managing an SCL Network License

With Synopsys Common Licensing, you can run CODE V using either a *nodelocked* license or a *network*

Selecting a License Server

Before installing any software, you must identify the computer that will act as the license server. This must be a computer connected to a network through which it can communicate with one or more client computers.

When specifying the server name for a network client, specify the port and the server name or IP address. For example, `27020@MyServer` or `27020@123.456.78.90`.

9. Select *Network (Server Installation)* and click Next to continue to the k (Serk Ose Key File Setup screen.

2. Copy the Host ID to retrieve your license key on the Synopsys SolvNetPlus website. See *Retrieving License Keys* on page 58 for instructions.

After you retrieve your license key, go to *Installing a License Key for an SCL License Server* on page 48.

Obtaining the Host ID for a Dongle

If you are using a dongle for Synopsys Common Licensing, follow these steps to obtain the Host ID for the dongle.

1. Insert the USB dongle in an active USB port. A

4. Enter the full path and file name or click the **Browse** button, navigate to the file, and select it the Windows Open dialog box.
5. Click **Next** on the License Key File Setup screen.

   The SCL Installer Setup screen is displayed.
6. Leave the input field blank and click **Next** to accept the current version.

   When the progress screen closes, the license key file is installed and ready to use.

Installing CODE V on Client Machines

CODE V must be installed on each client machine wher

If you want to enter more than one server name, separate the names with a semicolon. For example, `27020@MyServer1;27020@MyServer2` where `MyServer1` and `MyServer2` are the two servers used. Synopsys Common Licensing checks the servers in the order listed.

When the progress screen closes, the Synopsys Common Licensing software installation is complete.

11. In the Start Copying Files page, confirm your information.
    - If the information is correct, click **Next**.
    - If a correction is needed, use the **Back** and **Next** buttons to navigate between pages. Make your corrections and then return to this page before clicking **Next**.
12. When the installation is complete, click **Finish** to close the wizard.

Modifying License Options for Synopsys Common Licensing Network Licenses

Use the Configure Licensing tool to update your SCL license information. You can use it to switch between SCL license types. For Nodelocked and Network Server license types, you can chang

Signing Up for a SolvNetPlus Account

Before you can download CODE V software and license keys, you must sign up for a Synopsys SolvNetPlus account. If you already have a SolvNetPlus account, you can skip to *Downloading CODE V Software from SolvNetPlus* on page 53.

1. Go to https://solvnetplus.synopsys.com and click **REGISTER - CREATE ACCOUNT**.

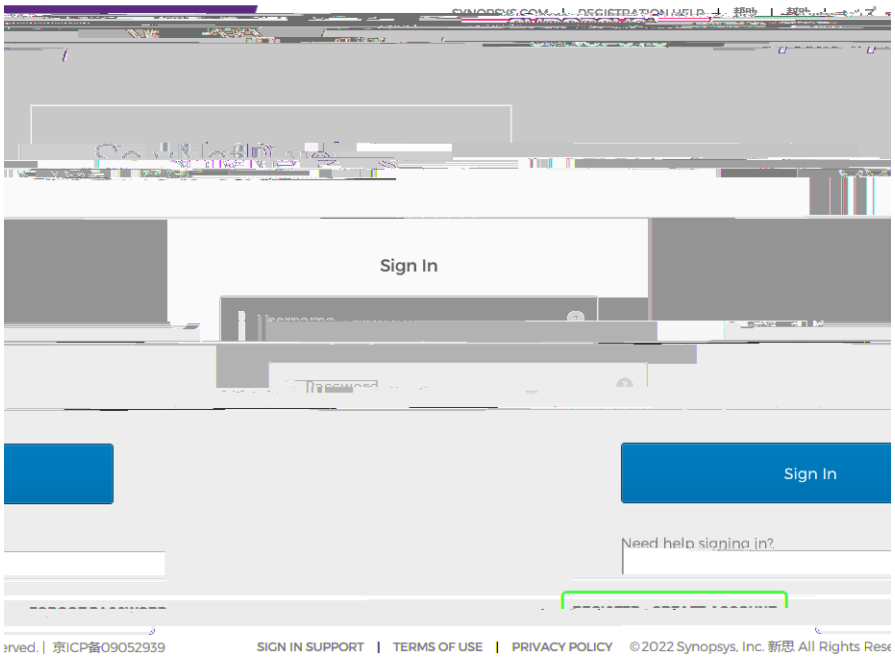

2. Follow the instructions for self registration.

   SolvNetPlus will send a verification code to the email address you specified. You must provide this code to continue with registration.

   During the registration process, you will need to enter your company's Site ID. If you do not know your company's Site ID, please contact solvnetplusfeedback@synopsys.com to request it. Be sure to include your company name and address in the email request.

Downloading CODE V Software from SolvNetPlus

Follow these steps to download the CODE V product. If you unable to download software, you can order a CD or DVD instead. See *Ordering Media (CDs/DVDs)* on page 56 for instructions.

1. Go to https://solvnetplus.synopsys.com and enter your User Name and Password to sign in.
2. In SolvNetPlus, click **Downloads**.

All Synopsys products currently licensed at your company will be listed.

3. Select the product that you want to download.

4. Select the version you would like to download.

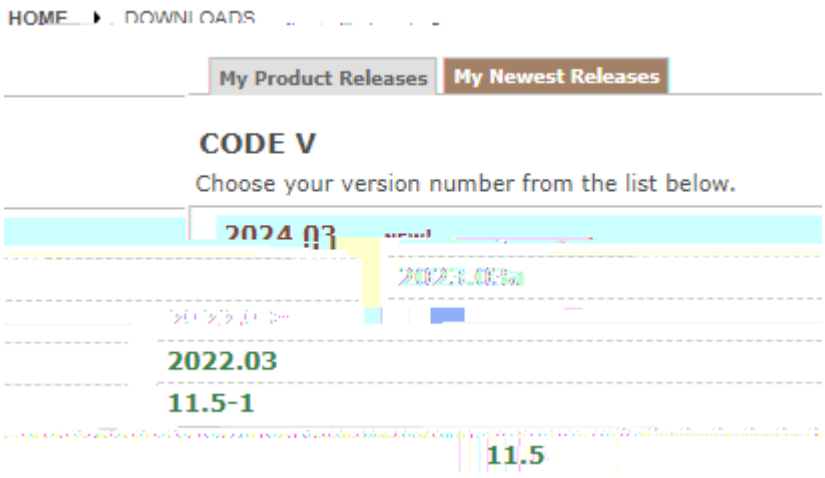

The **Download Details** page is displayed. From this page you may download the latest Release Notes, Installation Guide, and the installation software package. If you have not signed up to receive release alerts, it is recommended that you do so.

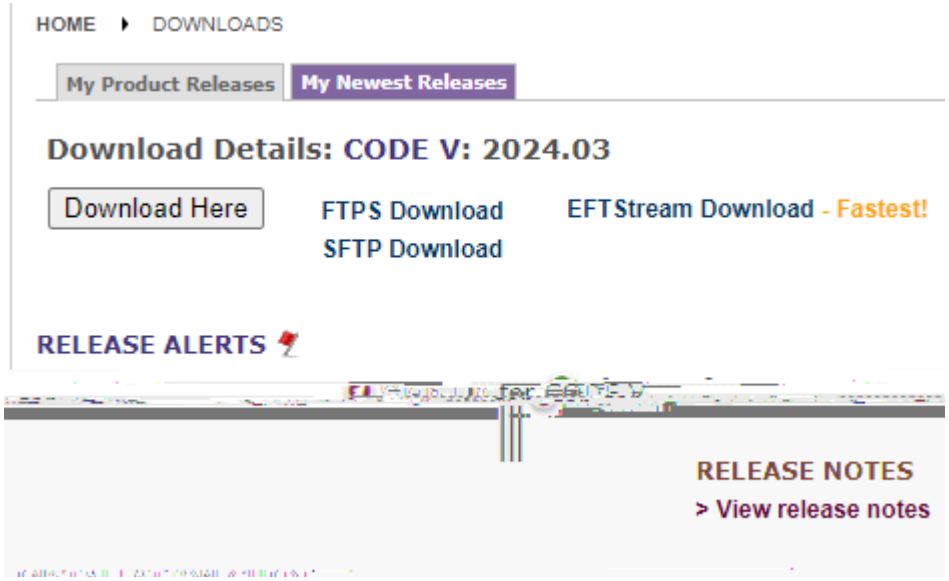

5. In **Download Details** under **Release Alerts**, click the **Sign up** link to display **Release Alerts** options that allow you to subscribe to Release Notification emails from SolvNetPlus. These emails let you know when a new version of CODE V is available for download.

   a. Click the product name for which you would like to receive notifications or click **ALL** to receive notifications for all products in the list.
   b. Click the **Add** button.
   c. Click the **Include patch notifications** check box. This allows you to receive notifications of CODE V service releases.
   d. Click the **Update** button.

   You are returned to the **Download Details** page.

6. On the **Downloads Details** page, click **Download Here** to download from your browser or read and follow the instructions for the other download choices.
7. On the Notice page, read the notice and then click **Agree and Sign In** to continue.
8. From the list of available files, click the name of the file and then use your browser to open or save the file.

The following files are available for CODE V. Based on the version of CODE V that you select in step 4, the actual file names displayed may be different but will have similar names.

- checksum_info.txt is a file used for internal purposes.
- CODEV*version*.exe (where *version* is the version number for the release) is the installation file for CODE V.
- FloatingLM*version*.exe is for customers using CODE V Legacy licensing with a floating license. Only the system administrator who will set up a floating license server needs to download this file. See *Installing CODE V with a Floating License (Legacy Licensing)* on page 17 for installation instructions.

Next steps:

- If you need to obtain a license key, see *Retrieving License Keys* on page 58.
- If you already have a license key, see one of the following procedures, based on the licensing you are using:
  - *Installing CODE V with Legacy Licensing* on page 11
  - *Installing CODE V with a Floating License (Legacy Licensing)* on page 17.
  - *Installing CODE V with a Nodelocked License* on page 40
  - *Installing and Managing an SCL Network License* on page 45

Ordering Media (CDs/DVDs)

If you unable to download software and would like to order media (CD or DVD) instead, you can do this directly on the Synopsys SolvNetPlus website. Follow these steps to order media.

1. Go to https://solvnetplus.synopsys.com and enter your User Name and Password to sign in.
2. Click the Downloads tile.
3. In the lower-right area of the page, click the Media Center link.

4. On the Media Center page, select the product (e.g., CODE V, LightTools, etc.) and click the Add button.

5. Complete the Shipping Address information and click Continue.

Obtaining the Host ID

A license key is associated with a unique value on your device called a *Host ID*, and it works for only one computer or USB dongle. Because of this, you need to know the Host ID for your computer or dongle before you can retrieve a license key file. Based on the licensing you're using, see one the following procedures.

for CODE V Legacy Licensing:

- Fixed license - *Obtaining the Host ID for a License Dongle* on page 14
- Floating license - *Obtaining the Host ID for a License Dongle on the License Server* on page 26

for Synopsys Common Licensing:

- Nodelocked license - *Obtaining the Host ID for an SCL Nodelocked License* on page 41
- Network (Server) license - *Obtaining the Host ID for an SCL Network License* on page 47

Retrieving License Keys

A license key is a file associated with your specific computer or USB dongle. The license key file contains licensing information that allows one or more computers to use Synopsys products. (The number of computers depends on your licensing agreement and licensing method employed.) You can obtain a license key using the SmartKeys web page on the Synopsys SolvNetPlus website. Follow these steps tomor85(n(le befo)-o)-r your license key.

1. On SolvNetPlus Home page, clfok the **Downloads** tile, and then clfck the **SmartKeys** tab.

2. On the SmartKeys Home page, clfck the **Key Retrieval** li

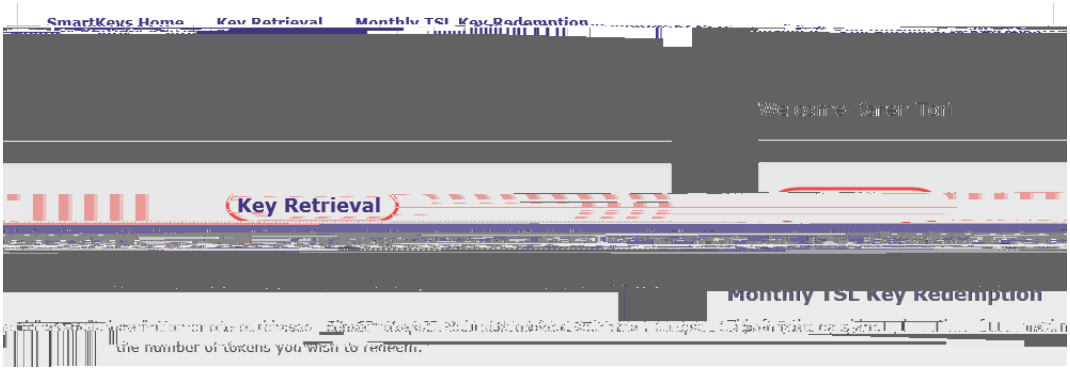

The SmartKeys Key Retrieval page is displayed.

You can retrieve a license key for a single host (your computer or USB dongle), or you can retrieve license keys for all Host IDs at your company.

Appendix B Troubleshooting the CODE V Legacy Licensing Floating License Installation

If a security problem occurs when you use a CODE V Legacy Licensing floating license, a **License Manager Error** dialog box displays an error message. Below are a few common security errors with their causes and resolutions. If you are unable to correct the problem, please contact CODE V Support (see *Contacting Customer Support* on page 9).

Problem Adding License Keys to the License Server

Problem: **Sentinel: Error [19]: Failed to add license code…**

Cause: This general error message indicates that the license keys were not applied successfully in the

Problem: **Error #18b(13) - The Floating License manager is out of date.**

Cause: The CODE V version running on this computer is not supported by the Floating License Manager running on the license server specified in **File** > **License Manager** on the **Info tab** in the **License Server** box. (To support the latest client version, the administrator must update the Floating License Manager software on the license server to a version compatible with the latest CODE V software version running on its licensed clients. See “CODE V System Requirements” on page 5 for compatibility information. See “Installing the Floating License Manager on the License Server” on page 19 for installation instructions.)

Solution: Contact the license server administrator to find out when the license server will be updated. After the license server is updated, restart CODE V. If the license server administrator directs you to a new license server, see “Changing Floating License Options on Client Machines” on page 29.

Problem: **Error #0xC800100D - License code for version x.xx has expired.**

Cause: The license key for CODE V has expired, or the PC date is before the start date of the license.

Solution: Verify that the date on the computer is correct. Install the license key for this version of CODE V on the license manager machine according to the instructions in *Installing the License Key for a Floating License* on page 27. If a new license key is needed, contact CODE V Customer Service.

Problem: **Error #8001008 - License manager is not responding. Verify license manager host is available and license manager process is running.**

Cause: The Sentinel Floating License Manager program has been disabled.

Solution: Restart the license manager program. To do this: On the PC where the license server is installed, open the Control Panel (select **Start > Settings > Control Panel**), select **Administrative Tools** and then **Services**. Locate and right-click **Sentinel RMS License Manager** in the dialog box, and select the **Start** option on the pop-up menu.

Cause: The license manager machine is unavailable.

Solution: Verify that the license manager machine is available on the network.

Cause: The ORA_LSHOST environment variable is not set or is incorrectly set.

Solution: Check to make sure the license server name is correct by choosing the **File > License Manager** menu in CODE V. If the license server name is incorrect, modify it. See “Changing Floating License Op(V. .0028 udTw[(Aft)24 Tc[(Licenses29.7licesesoieeoo[Tw[(COD7(2])]528t9r)6(nTf9.rg23.35Tc7.06

Appendix C Troubleshooting Synopsys Common Licensing

This appendix lists licensing errors that you might encounter with Synopsys Common Licensing and describes probable causes and resolutions. If you are unable to correct the problem, please contact CODE V Support (see *Contacting Customer Support* on page 9).

While the CODE V installer streamlines the product installation and the Synopsys Common Licensing installation, problems may occur. Use the following information to understand error messages and resolve issues.

The CODE V installer includes the following components for Synopsys Common Licensing:

- Optical/Photonics Solutions Licensing components version 2023.12
- Synopsys Common Licensing version 2022.12

For Nodelocked and Network (Server Installation) installations, the CODE V installer configures the Synopsys Common Licensing server as the Flexlm Service 1 service.

Error messages may refer to the "flex log", which is the log file for Synopsys Common Licensing. The CODE V installer configures this log file to be named `flexlog.txt` in the `C:\Synopsys\licenses` directory.

Synopsys Common Licensing always includes a Synopsys Common Licensing server. Even when you have a nodelocked installation, there is an instance of the Synopsys Common Licensing server running on your system. Therefore, even when you are not using a networked license, you may have issues communicating with the Synopsys Common Licensing server.

There are no remaining licenses for the requested feature

Licensed number of users already reached.

A limited number of users can use this feature at the same time, and the limit has been reached.

If you are running multiple sessions concurrently, you may have reached the maximum concurrent session limit.

For network licenses, please wait for other users to end their feature usage, then try again.

To further check license usage at your site, please contact your SCL license administrator.

The license does not include the requested feature

No Such Feature Exists

The license file found does not contain a valid feature for this version of the software.

Please check with your site manager for the valid features.

Cannot connect to the license server system

- License file contains an invalid Host ID

  Contact CODE V Support

- License file is not installed

  See *Modifying License Options for Synopsys Common Licensing Nodelocked Licenses* on page 43 or *Modifying License Options for Synopsys Common Licensing Network Licenses* on page 50 to install the license file.

For nodelocked licenses, there are situations where the licensing processes can be stopped and will not automatically restart. When you try to start the software you will get the `Cannot connect to the license server system` error. Under these circumstances you will need to restart your computer to get the licensing processes to restart.

A connection to the Synopsys Common Licensing license manager was lost

The complete error message is `A connection to the Synopsys Common Licensing license manager was lost, and the application has exhausted all of its retry attempts`.

Cannot connect to license server system.

For network licenses, check your network connection to your network license server.

For nodelocked licenses, try rebooting your computer, then try again.

If the error persists, contact codev_support@synopsys.com or your local distributor.

Include the following:

- A screenshot of the License Manager Error window
- The following files from the `licenses` folder (by default, `C:\Synopsys\licenses`):
  - `opslic.txt`
  - `flexlog.txt`

The license request was denied by the network license server

This error message can be received from multiple scenarios.

- The User/Host on EXCLUDE list for feature (FlexNet Licensing error: -38, -101)
- User/host not on INCLUDE list for feature (FlexNet Licensing error: -39)
- Checkout exceeds MAX specified in options file (FlexNet Licensing error: -87)

Please contact your SCL license administrator.

This error can occur for one of the following reasons:

- Max limit of users has been reached.
- You have been excluded from using this feature.
- The feature is reserved for others.

Glossary

Client (machine)	The client, or client machine, is a computer that has CODE V installed on it, and is configured to request a license from a license server. For CODE V Legacy Licensing, this machine runs software that uses a *floating license*. For Synopsys Common Licensing, this machine runs Network Client software, which uses a *network license*.
CODE V Legacy Licensing	The method of licensing used in releases up to and including CODE V 2024.03. It is based on the Sentinel RMS™ License Manager.
Fixed License	Used with CODE V Legacy Licensing. A license associated with a specific USB dongle.
Floating License	Used with CODE V Legacy Licensing. A license managed by the OSG Floating License Manager.
Host ID	A string used to identify a computer or a USB dongle. The Synopsys SmartKeys site and delivery email reference the Host ID value when license key files are requested and delivered.
License Key file	A file containing the encoded license information that defines how CODE V may be used. Note that license key files are unique for each licensing method—Legacy and SCL—and are not interchangeable between the two methods. In an implementation where licensing is centrally managed by a license server, a license key file is installed only to the license server and not on its managed clients. In an implementation where licensing is not centrally managed, each computer running CODE V must have its own license key file.
License Server	The computer that hosts the software that regulates and protects application use on client machines. The license server communicates with client machines over the network to manage their licenses. Note that License Server Software must match the method of licensing used by its clients. CODE V Legacy Licensing is based on Sentinel RMS™ and installs an OSG Floating License Manager. Synopsys Common Licensing is based on FlexNet Licensing and installs a Synopsys Common Licensing server.
Network License	Used with Synopsys Common Licensing. A license managed by the Synopsys Common Licensing server.
Nodelocked License	Used with Synopsys Common Licensing. A license associated with a specific computer or USB dongle.
Site ID	A unique number used to identify a specific company. Every company that uses CODE V and other Synopsys software has a T4 TD 0 0 (p) -5 (ates USB) NsLspnicates